

## Specification

Model	CD259STA-40S-D
Image Sensor	1/2.8" SONY IMX2441+291 2.1MP
Resolution	1080P
Signal System	PAL / NTSC
Minimum Illumination	0.01Lux/F1.2
S/N Ratio	More than 52 dB
Synchronous System	Internal
IR Distance	No IR Board
IR Power On	Photodiode AUTO Control
Video Output	CVBS / CVI / TVI / AHD
Power/Current	DC12V / AC24V (+/-10%)/800mA
Lens	2.8-12mm Manual Zoom Lens
Weather Proof	IP66
Dimension (mm)	φ 150 x 127(H)
Weight (g)	1092
Operating Conditions	-10~+50 □ RH95% MAX

## Accessories list

Name	Number
Camera	1
User Guide	1

### Notes:

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

# CD259STA-40S-D

## 4in1 SONY Starvis Weatherproof Vandalproof Varifocal Camera



Thank you for using our product.  
Before providing power for the camera, please read this manual carefully before use.

We adopt the latest technical of sensor and driver. It owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to your CCTV system.

\*pictures and specifications subject to change or typographical errors without notice

## Main Features

### > Auto Gain Control (AGC)

Built-in auto gain control (AGC) circuit. The color camera can get high definition picture in low Lux condition.

### > Auto Electronic Shutter (AES)

Built-in auto electronic shutter function. The color camera's AES speed can reach 1/100,000s.

### > Scanning Mode

NTSC or PAL mode.

### > Signal Switch

CVI MODE: hold up key 5s.

TVI MODE : hold down key 5s.

CVBS MODE : hold left key 5s.


AHD MODE : hold right key 5s.

Press towards desired video technology for 5 sec. within 10 sec. of connecting power.

### > Menu

Lens	MANUAL / AUTO
EXPOSURE	SHUTTER / AGC / SENS-UP / BRIGHTNESS / D-WDR / DEFOG
BACKLIGHT	OFF / BLC / HSBLG
WHITE BAL	ATW
DAY&NIGHT	D→N / N→D / RETURN
NR	2DNR / 3DNR / RETURN
SPECIAL	CAM TITLE / D-EFFECT / MOTION / PRIVACY / LANGUAGE / DEFECT / RS485 / RETURN
ADJUST	SHARPNESS / MONITOR / LSC / VIDEO OUT / RETURN
EXIT	SAVE / CANCEL

## Device connection

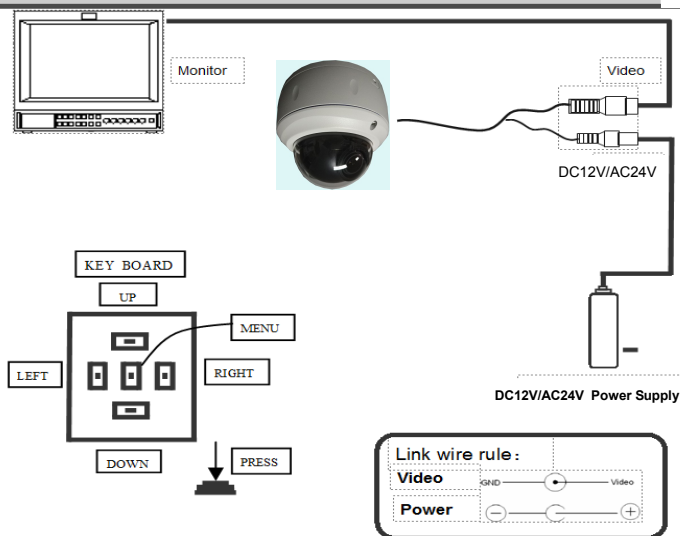

## Safety instruction

1. Before using the camera, please read this manual carefully and keep it safely for later use.
2. Installation should be proceeded by professional service and follow manufacturer's instructions, do not dismantle without authorization.
3. In order to prevent sensor, do not expose lens to intense light source in long time.
4. Do not touch sensor directly. Please covers the dustproof cover when the camera is not being used.
5. Please use a dry soft cloth to clean the camera. If dirt difficult to clean, use detergent with water and wipe dry the camera.
6. Do not install camera under air conditioning's air gate, or else lens blur with condensation of moisture.
7. Please ensure that all electric power sources are turned off when not open, installation, clean, etc operation.
8. Please transporting, using and storing the camera in allowable temperature and humidity.
9. If the camera was broken, for example power cord or plug damaged, splash liquid or foreign matter fall into camera, raining, wetting, etc can't work situation, please contact manufacturer or maintenance center (modify and maintenance without permission, you must be responsible for the problems).

## Common Problems and Troubleshooting

### > No Picture after providing power

May be the power supply voltage abnormality, please check the power supply voltage and pole whether exactitude. Please check all the connecting cable and monitors whether be connected correctly or not.

### > The picture level direction have flowing interference ripples

May be caused by the power supply AC ripples, it need filter the wave of the power supply. Check the monitor and peripheral equipments used.

### > The picture background color changes continuously

The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras. Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it. Use power supply external sync. camera can solve it.

### > The picture smear too mass

The power supply's voltage unstable. Connecting cables not connect correctly or have high impedance.



### Note:

- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is  $-30\sim+60^{\circ}\text{C}$ . (Recommendatory operating temperature is  $-10\sim+50^{\circ}\text{C}$ .)
  - Do not mount the camera near by the radiator or heater.
- \*All logos and copyright belong to their respective owners