



Quick Start Guide

04D7M



1 Warning and Caution

- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. Any unauthorized changes or modifications could void the warranty.
- Do not allow water or liquid intrusion into the camera.
- All installation and operation here should conform to local electrical safety codes. Make sure the device is firmly installed on the wall or ceiling.
- Do not use camera beyond specified voltage range.
- Do not drop the camera or subject it to physical shock.
- Avoid touching the camera lens.
- If cleaning is necessary, please use cleaning cloth to wipe it gently.
- Do not aim the camera at the sun or extremely bright light sources.
- Do not place the camera in extremely hot or cold environments and dusty and damp locations. Do not expose it to highly electromagnetic radiation.
- Do not block any ventilations.

2 Package



Camera



Quick start guide



4 tapping screws PA 4×25



CD



Drill template



Plastic plug ×4



Screwdriver




CVBS&DC
IN cables




Junction box

3 Overview

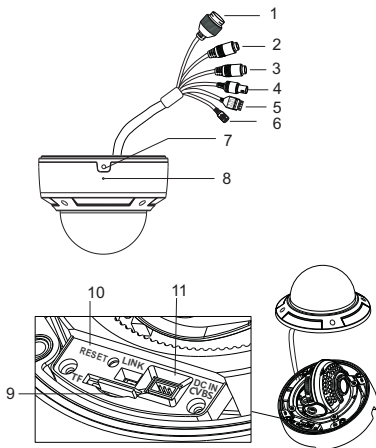


- 1 Ethernet connector
- 2 MIC input (3.5mm)
- 3 Line out (3.5mm)
- 4 Analog output (BNC)
- 5 Alarm input/output
- 6 DC power connector
- 7 Lock screw
- 8 Microphone
- 9 Micro SD card slot
- 10 Reset hole
- 11 CVBS/DC IN port for testing

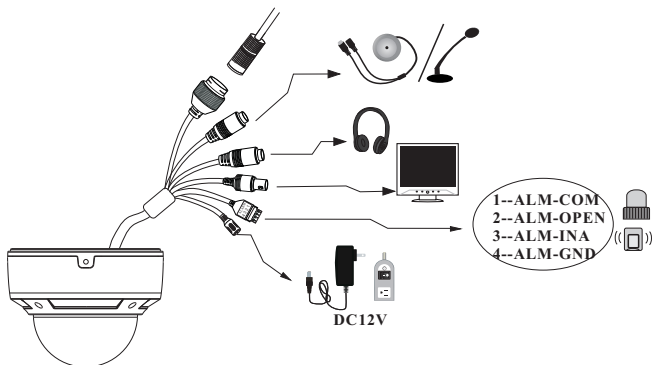

* 1 It is recommended to install the security cap for outdoor installations.

* 2 DC 12V power supply is not required if a PoE switch or injector is used to power the camera.

► Connecting Network Cable

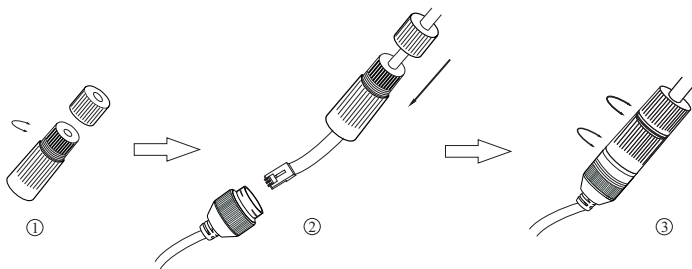

① Loosen the nut from the main element.


② Run the network cable (without RJ 45 connector) through both elements. Then crimp the cable with RJ 45 connector.

③ Connect the cable to the hermetic connector. Then tighten the nut and the main cover.


4 Installation

* Before you start, please make sure that the wall or ceiling is strong enough to withstand three times the weight of the camera.


- ① Open the upper cover of the junction box. Then install junction box onto the wall by using the screws provided.

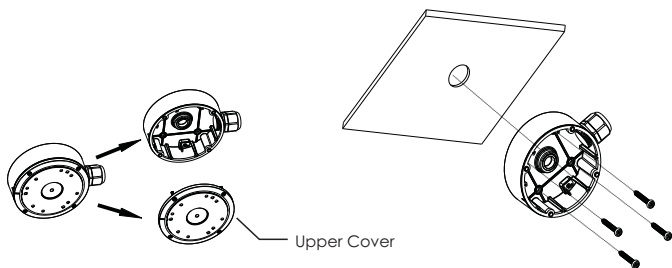


- ② Route the cables through the cable hole (take side conduit cabling for example). Then reinstall the upper cover to the junction box.

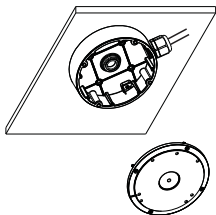


- ③ Loosen the screws to open the lower dome and then loosen the lock screw to remove the mounting base.

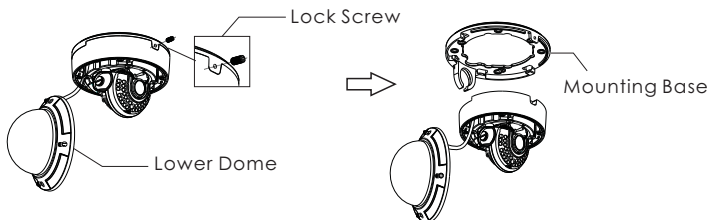


- ④ Install the mounting base onto the junction box. Then connect the cables and fix the dome to the mounting base with the lock screw.

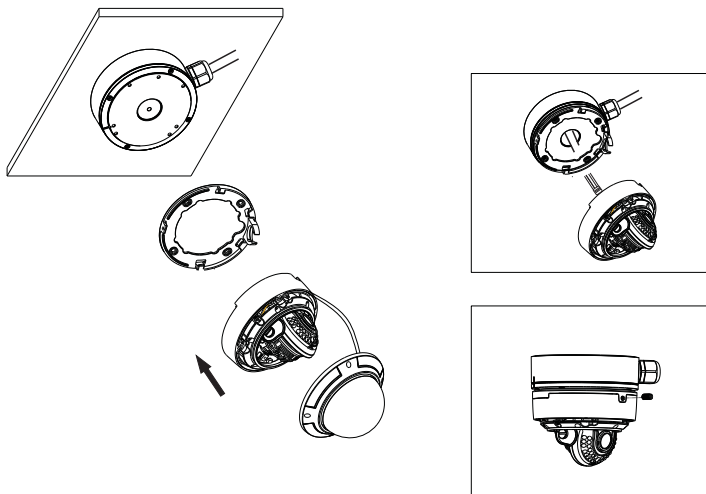

- ⑤ Three-axis Adjustment-Before adjustment, preview the image of the camera on a monitor and then adjust the camera according to the figure below to get an optimum angle.

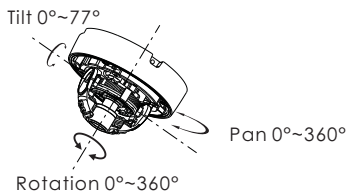

- ⑥ Install the lower dome back to the camera and fix it with the screws.

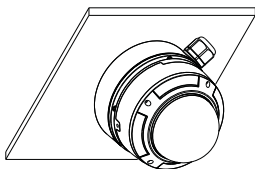


5 Web Operation and Login

IP Scanner can search for the device on the local network.

● Operation

- ① Make sure that the camera and the PC are connected to the same local network. The camera is set to DHCP by default.
- ② Install IP Scanner from the CD and run it after installation.

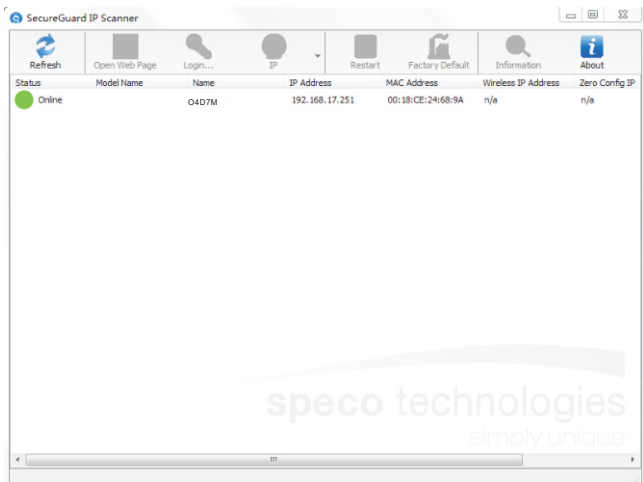

③ In the device list, you can view the IP address, model number, and MAC address of each device. Select the applicable device and double click to open up the web viewer. You can also manually enter the IP address in the address bar of the web browser.

speco technologies

Username

Password

The login interface is shown above. Default user name is admin and password is 1234. After logging in, follow directions to install applicable plugins.